



MPPT Solar Charge Controller

## User manual



Read these instructions carefully before use and keep it safe for future reference.

XTRA1206 / XTRA2206



Thank you for selecting the Vechline 1206/2206 series for MPPT solar charge controller. Please read this manual carefully before using the product and pay attention to the safety information

## **IMPORTANT SAFETY INSTRUCTIONS**

This manual contains all instructions of safety, installation and operation for XTRA series Maximum Power Point Tracking (MPPT) controller. "The controller" as referred to in this manual.

### General Safety Information

- Read carefully all the instructions and warnings in the manual before installation.
- No user serviceable components inside the controller. DO NOT disassemble or attempt to repair the controller.
- Mount the controller indoors. Avoid exposure the components and do not allow water to enter the controller.
- Install the controller in a well ventilated place. The controller's heat sink may become very hot during operation.
- Suggest installing appropriate external fuses/breakers.
- Make sure to switch off all PV array connections and the battery fuse/breakers before controller installation and adjustment.
- Power connections must remain tight to avoid excessive heating from loose connection.

# CONTENTS

<b>1. General Information</b> .....	<b>1</b>
1.1 Overview. ....	1
1.2 Characteristics. ....	3
1.3 Naming Rules of Controller models. ....	3
1.4 Product Classification. ....	4
<b>2. Installation Instructions</b> .....	<b>5</b>
2.1 General Installation Notes. ....	5
2.2 PV Array Requirements. ....	6
2.3 Wire Size. ....	9
2.4 Mounting. ....	11
<b>3. Display units</b> .....	<b>15</b>
3.1 Advanced Display unit (XDS2). ....	15
<b>4. Control Parameters Setting</b> .....	<b>21</b>
4.1 Battery types. ....	21
4.1.1 Support battery types. ....	21
4.1.2 Battery Voltage Control Parameters. ....	21
4.1.3 Settings. ....	26
4.2 Load working modes. ....	28
4.2.1 LCD setting. ....	28
4.2.2 RS485 communication setting. ....	29
4.3 Accessories (optional). ....	33
<b>5. Protections, Troubleshooting and Maintenance</b> .....	<b>35</b>
5.1 Protection. ....	35
5.2 Troubleshooting. ....	37
5.3 Maintenance. ....	39
<b>6. Technical Specifications</b> .....	<b>40</b>
<b>Annex I Conversion Efficiency Curves</b> .....	<b>44</b>
<b>Annex II Mechanical Dimension Diagram</b> .....	<b>46</b>

# 1.GENERAL INFORMATION

## 1.1 OVERVIEW

XTRA series controller carry XDS2 display unit that adopt the advanced MPPT control algorithm, it can minimize the maximum power point loss rate and loss time, quickly track the maximum power point (MPP) of the PV array and obtain the maximum energy from solar array under any conditions; and it can increase the ratio of energy utilization in the solar system by 20%-30% compared with PWM charging method.

Limiting the charging power & current and reducing charging power functions ensure the system stable with over PV modules in high temperature environment.IP33 Ingress protection and isolated RS485 design further improve the controller's reliability and meet the different application requirements.

XTRA series controller owns self-adaptive three-stage charging mode based on digital control circuit, which can effectively prolong the lifespan of battery and significantly improve the system performance. It also has comprehensive electronic protection for overcharge, overdischarge, PV & battery reverse polarity etc, to ensure the solar system more reliable and more durable. This controller can be widely used for RV household system, field monitoring and many other applications.

### **Features:**

- CE certification (LVD EN/IEC62109,EMC EN61000-6-1/3)
- 100% charging and discharging in working environment

temperature range

- High quality and low failure rate components of ST or IR to ensure service life
- Advanced MPPT technology & ultra-fast tracking speed guarantee tracking efficiency up to 99.5%
- Maximum DC/DC transfer efficiency is as high as 98.5%\*, full load efficiency is up to 97.2%\*
- Advanced MPPT control algorithm to minimize the MPPI lost rate and lost time
- Accurate recognizing and tracking of multi-peaks maximum power point
- Wide MPP operating voltage range
- Support the lead-acid and lithium batteries, programmable temperature compensation
- Limit charging power & current over rated value
- Real-time energy statistics function
- Power reduction automatically overtemperature value
- Multiple load work modes
- Comprehensive electronic protection
- Isolated RS485 with 5V/200mA protected output for no power devices, with Modbus protocol
- Support monitoring and setting the parameters via APP or PC software
- IP33▲ Ingress protection

★XTRA4415N@48V system

▲ 3-protection against solid objects: protected against solids objects over 2.5mm.

3-protected against sprays to 60° from the vertical.

## 1.2 CHARACTERISTICS

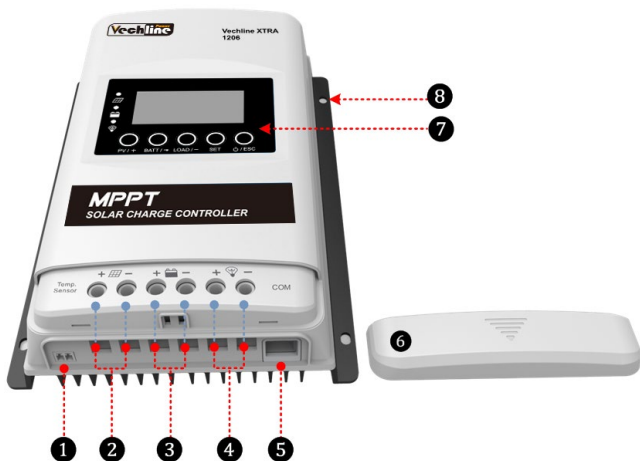



Figure 1 Product Characteristics

①	RTS*port	⑤	RS485 communication port
②	PV Terminals	⑥	Terminal protection cover
③	Battery Terminals	⑦	Display units
④	Load Terminals	⑧	Mounting Hole Φ5mm


★If the temperature sensor is shortcircuit or damaged, the controller will charge or discharge according the voltage setting point at the default temperature setting of 25 °C(no temperature compensation).

## 1.3 NAMING RULES OF CONTROLLER MODELS

XTRA 1 2 10 N - XDS2

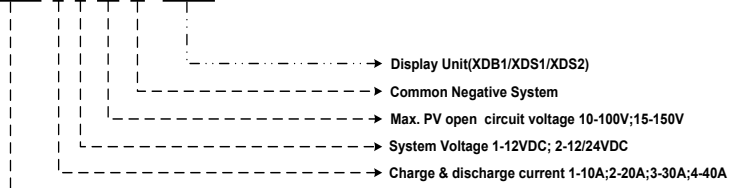

## 1.4 PRODUCT CLASSIFICATION

Classify	Model	Picture	Display
Advanced	XTRA XDS2		<p><b><u>LED Indicators:</u></b> PV &amp; battery &amp; load working status</p> <p><b><u>Buttons:</u></b> View or set the parameters or clear the error information.</p> <p><b><u>LCD:</u></b> <i>PV display:</i> voltage/current /generated energy/<b><u>power</u></b></p> <p><i>Battery display:</i> voltage/current/temperature/<b><u>capacity</u></b></p> <p><i>Load display:</i> <b><u>voltage</u></b>/current/<b><u>power</u></b> /consumed energy/load working mode</p>

## 2. INSTALLATION INSTRUCTIONS

### 2.1 GENERAL INSTALLATION NOTES

- Please read the entire installation instructions to get familiar with the installation steps before installation.
- Be very careful when installing the batteries, especially flooded lead-acid battery. Please wear eye protection, and have fresh water available to wash and clean any contact with battery acid.
- Keep the battery away from any metal objects, which may cause short circuit of the battery.
- Explosive battery gases may come out from the battery during charging, so make sure ventilation condition is good.
- Ventilation is highly recommended if mounted in an enclosure. Never install the controller in a sealed enclosure with flooded batteries! Battery fumes from vented batteries will corrode and destroy the controller circuits.
- Loose power connections and corroded wires may result in high heat that can melt wire insulation, burn surrounding materials, or even cause fire. Ensure tight connections and use cable clamps to secure cables and prevent them from swaying in mobile applications.
- The controller can work with lead-acid battery and lithium battery within its control scope.
- Battery connection may be wired to one battery or a bank of batteries. The following instructions refer to a singular battery, but it is implied that the battery connection can be

made to either one battery or a group of batteries in a battery bank.

- Multiple same models of controllers can be installed in parallel on the same battery bank to achieve higher charging current. Each controller must have its own solar module(s).
- Select the system cables according to 5A/mm<sup>2</sup> or less current density in accordance with Article 690 of the National Electrical Code, NFPA 70.

## 2.2 PV ARRAY REQUIREMENTS

(1) Serial connection (string) of PV modules.

As the core component of solar system, controller could be suitable for various types of PV modules and maximize converting solar energy into electrical energy. According to the open circuit voltage ( $V_{oc}$ ) and the maximum power point voltage ( $V_{Mpp}$ ) of the MPPT controller, the series number of different types PV modules can be calculated. The below table is for reference only.

XTRA1206/2206:

System voltage	36cell Voc<23V		48cell Voc<31V		54cell Voc<34V		60cell Voc<38V	
	Max	Best	Max.	Best	Max	Best	Max	Best
12V	2	2	1	1	1	1	1	1
24V	2	2	-	-	-	-	-	-

System voltage	72cell Voc<46V		96cell Voc<62V		Thin-Film Module Voc>80V
	Max.	Best	Max.	Best	
12V	1	1	-	-	-
24V	1	1	-	-	-

NOTE: The above parameter values are calculated under standard test conditions (STC (Standard Test Condition): Irradiance 1000W/m<sup>2</sup>, Module Temperature 25°C, Air Mass1.5.)

## (2) Maximum PV array power.

The MPPT controller has the function of charging current/power-limiting, that is, during the charging process, when the charging current or power exceeds the rated charging current or power, the controller will automatically limit the charging current or power to the rated range, which can effectively protect the charging parts of controller, and prevent damages to the controller due to the connection of some over-specification PV modules. The actual operation of PV array is as follows:

Condition 1:

Actual charging power of PV array ≤ Rated charging power of controller

Condition 2:

Actual charging current of PV array ≤ Rated charging current of controller

When the controller operates under “Condition 1” or “Condition 2”, it will carry out the charging as per the actual current or power; at this time, the controller can work at the maximum power point of PV array.



**WARNING:** When the power of PV is not greater than the rated charging power, but the maximum open-circuit voltage of PV array is more than 60V(XTRA\*\*06N)/100V(XTRA\*\*10N)/150V(XTRA\*\*15N) (at the lowest environmental temperature), the controller may be damaged.

### **Condition 3:**

Actual charging power of PV array > Rated charging power of controller

### **Condition 4:**

Actual charging current of PV array > Rated charging current of controller

When the controller operates under “Condition 3” or “Condition 4”, it will carry out the charging as per the rated current or power.



**WARNING:** When the power of PV module is greater than the rated charging power, and the maximum open-circuit voltage of PV array is more than 60V(XTRA\*\*06N)/100V(XTRA\*\*10N)/150V(XTRA\*\*15N) (at the lowest environmental temperature), the controller may be damaged.

According to “Peak Sun Hours diagram”, if the power of PV array exceeds the rated charging power of controller, then the charging time as per the rated power will be prolonged, so that more energy can be obtained for charging the battery. However, in the practical application, the maximum power of PV array shall be not greater than 1.5 x the rated charging power of controller. If the maximum power of PV array exceeds the rated charging power of controller too much, it will not only cause the waste of PV modules, but also increase the open-circuit voltage of PV array due to the influence of environmental temperature, which may make the probability of damage to the controller rise. Therefore, it is very important to configure the system reasonably. For the recommended maximum power of PV array for this controller, please refer to the table below:

Model	Rated Charge Current	Rated Charge Power	Max. PV Array Power	Max. PV open circuit voltage
XTRA1206	10A	130W/12V 260W/24V	195W/12V 390W/24V	46V <sup>①</sup> 60V <sup>②</sup>
XTRA2206	20A	260W/12V 520W/24V	390W/12V 780W/24V	

①At 25°C environment temperature

②At minimum operating environment temperature

## 2.3 WIRE SIZE

The wiring and installation methods must conform to all national and local electrical code requirements.

### PV Wire Size:

Since PV array output can vary due to the PV module size, connection method or sunlight angle, the minimum wire size can be calculated by the  $I_{sc}^*$  of PV array. Please refer to the value of  $I_{sc}$  in the PV module specification. When PV modules connect in series, the  $I_{sc}$  is equal to a PV modules  $I_{sc}$ . When PV modules connect in parallel, the  $I_{sc}$  is equal to the sum of the PV modules'  $I_{sc}$ . The  $I_{sc}$  of the PV array must not exceed the controller' s maximum PV input current. Please refer to the table as below:

NOTE: All PV modules in a given array are assumed to be identical.

\*  $I_{sc}$ =short circuit current(amps)  $V_{oc}$ =open circuit voltage.

Model	Max. PV input current	Max. PV wire size*
XTRA1206	10A	4mm <sup>2</sup> /12AWG
XTRA2206	20A	6mm <sup>2</sup> /10AWG

\* These are the maximum wire sizes that will fit the controller terminals.



**CAUTION:** When the PV modules connect in series, the open circuit voltage of the PV array must not exceed 46V (XTRA\*\*06) at 25°C environment temperature.

### Battery and load wire size:

The battery and load wire size must conform to the rated current, the reference size as below:

Model	Rated charge current	Rated discharge current	Battery wire size	Load wire size
XTRA1206	10A	10A	4mm <sup>2</sup> /12AWG	4mm <sup>2</sup> /12AWG
XTRA2206	20A	20A	6mm <sup>2</sup> /10AWG	6mm <sup>2</sup> /10AWG



**CAUTION:** The wire size is only for reference. If there is a long distance between the PV array and the controller or between the controller and the battery, larger wires can be used to reduce the voltage drop and improve performance.



**CAUTION:** For the battery, the recommended wire will be selected according to the conditions that its terminals are not connected to any additional inverter.

## 2.4 MOUNTING



**WARNING:** Risk of explosion! Never install the controller in a sealed enclosure with flooded batteries! Do not install in a confined area where battery gas can accumulate.



**WARNING:** Risk of electric shock! When wiring the solar modules, the PV array can produce a high open circuit voltage, so turn off the breaker before wiring and be careful when wiring.



**CAUTION:** The controller requires at least 150mm of clearance above and below for proper air flow. Ventilation is highly recommended if mounted in an enclosure.

Installation procedure:



Figure2-1

**Step 1:** Determination of installation location and heat-dissipation space

Determination of installation location: The controller shall be installed in a place with sufficient air flow through the radiators of the controller and a minimum clearance of 150 mm from the upper and lower edges of the controller

to ensure natural thermal convection. Please see Figure 2-1: Mounting.



**CAUTION:** If the controller is to be installed in an enclosed box, it is important to ensure reliable heat dissipation through the box.

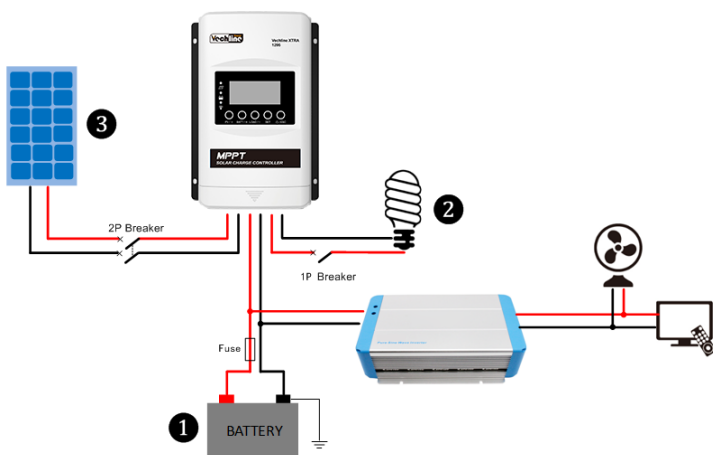


Figure 2-2 Schematic of wiring

**Step 2:** Connect the system in the order of ① battery → ② load → ③ PV array in accordance with Figure 2-2, "Schematic Wiring Diagram" and disconnect the system in the reverse order ③ ② ①.



**CAUTION:** While wiring the controller do not close the circuit breaker or fuse and make sure that the leads of "+" and "-" poles are connected correctly.



**CAUTION:**A fuse which current is 1.25 to 2 times the rated current of the controller, must be installed on the battery side with a distance from the battery not greater than 150 mm.



**CAUTION:** If the controller is to be used in an area with frequent lightning strikes or unattended area, it must install an external surge arrester.



**CAUTION:** If an inverter is to be connected to the system, connect the inverter directly to the battery, not to the load side of the controller.

### Step 3: Grounding

XTRA series is a common-negative controller, where all the negative terminals of PV array, battery and load can be grounded simultaneously or any one of them will be grounded. However, according to the practical application, all the negative terminals of PV array, battery and load can also be ungrounded, but the grounding terminal on its shell must be grounded, which may effectively shield the electromagnetic interference from the outside, and prevent some electric shock to human body due to the electrification of the shell.



**CAUTION:** For common-negative system, such as motorhome, it is recommended to use a common-negative controller; but if in the common-negative system, some common-positive equipment are used, and the positive electrode is grounded, the controller may be damaged.

### Step 4: Connect accessories

- Connect the remote temperature sensor cable



**Temperature Sensor**  
(Model:RT-MF58R47K3.81A)



**Remote Temperature Sensor Cable(Optional)**  
(Model:RTS300R47K3.81A)

Connect the remote temperature sensor cable to the interface ① and place the other end close to the battery.



**CAUTION:** If the remote temperature sensor is not connected to the controller,, the default setting for battery charging or discharging temperature is 25 °C without temperature compensation.

- Connect the accessories for RS485 communication Refer to chapter4“Control Parameters Setting”.

### **Step 5:** Powered on the controller


Closing the battery fuse will switch on the controller. Then check the status of the battery indicator (the controller is operating normally when the indicator is lit in green).Close the fuse and circuit breaker of the load and PV array. Then the system will be operating in the preprogrammed mode.






**CAUTION:** If the controller is not operating properly or the battery indicator on the controller shows an abnormality, please refer to 5.2 “Troubleshooting”.

### 3. DISPLAY UNITS
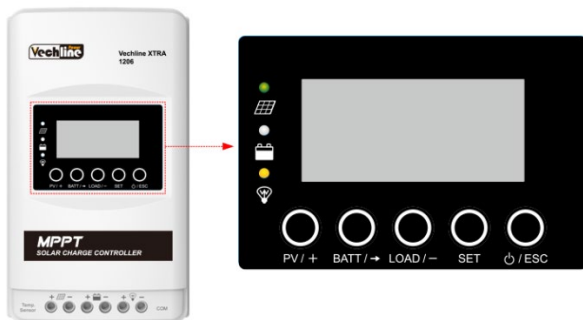
#### 3.1 ADVANCED DISPLAY UNITS (XDS2)








Indicator:

Indicator	Color	Status	Instruction
	Green	On Solid	PV connection normal but low voltage(low irradiance) from PV, no charging
	Green	OFF	No PV voltage(night time) or PV connection problem
	Green	Slowly Flashing(1Hz)	In charging
	Green	Fast Flashing(4Hz)	PV Over voltage
	Green	On Solid	Normal
	Green	Slowly Flashing(1Hz)	Full
	Green	Fast Flashing(4Hz)	Over voltage
	Orange	On Solid	Under voltage
	Red	On Solid	Over discharged
	Red	Slowly Flashing(1Hz)	Battery Overheating Lithium battery Low temperature <sup>®</sup>
	Yellow	On Solid	Load ON
	Yellow	OFF	Load OFF
PV&BATTLed fast flashing			Controller Overheating System voltage error <sup>®</sup>


①When a lead-acid battery is used, the controller doesn't have the low temperature protection.







②When a lithium battery is used, the system voltage can't be identified automatically

### Button:

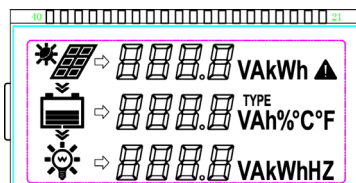
	Press the PV-button	PV browsing interface Setting data +
	Press the PV-button and hold 5s	Setting the LCD cycle time
	Press the BATT-button	BATT browsing interface Cursor displacement during setting
	Press the button and hold 5s	Setting the battery type, battery capacity level and temperature unit.
	Press the LOAD-button	Controller load browsing interface Setting data -
	Press the LOAD-button and hold 5s	Setting the load working mode
	Press the SET-button	Enter into setting interface Setting interface switch to the browsing interface Setting parameter as enter button
	Press the ESC-button	Exit the setting interface

### Display:

 


Icon	Information	Icon	Information	Icon	Information
	Day		Not charging		Not discharging
	Night		Charging		Discharging

### PV parameters

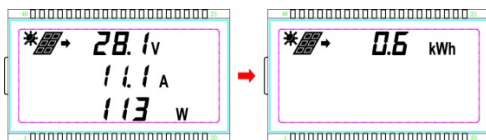


Display: Voltage/Current/Power/Generated Energy

### Battery parameters

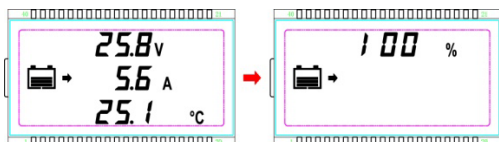


Display: Voltage/Current/Temperature/Battery capacity level

## Load parameters

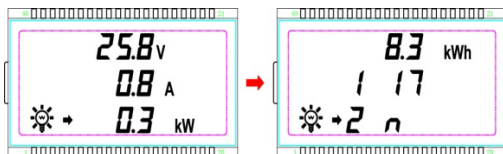

Display: Voltage/Current/Power/Consumed energy/Load working mode-Timer1/ Load working mode-Timer2

Setting parameters, battery type:

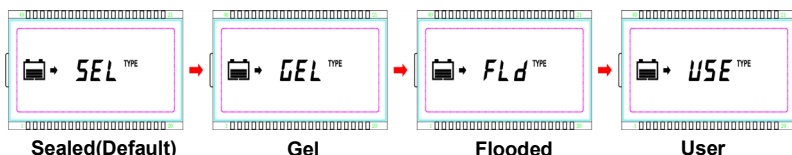

Operation:

**Step 1:** Press the SET-button for the setting interface.

**Step 2:** Press the BATT-button and hold 5seconds for the battery type interface.


**Step 3:** Press the PV- or LOAD-button to choose the battery type.

**Step 4:** Press the SET-button to confirm the battery type.



**CAUTION:** Please refer to chapter 4.1 for the battery control voltage setting, when the battery type is User.

Setting parameters, battery capacity:

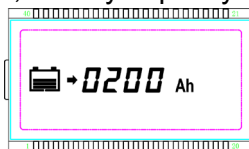

Operation:

**Step 1:** Press the SET-button for the setting interface.


**Step 2:** Press the BATT-button and hold 5s for the battery type interface.

**Step 3:** Press the SET-button for the battery capacity interface.

**Step 4:** Press the PV- or LOAD button to set the battery capacity.

**Step 5:** Press the SET-button to confirm the parameters.

Setting parameters, temperature units:

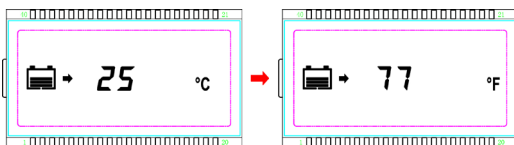

Operation:

**Step 1:** Press the SET-button for the setting interface.


**Step 2:** Press the BATT-button and hold 5s for the battery type interface.

**Step 3:** Press the SET-button twice for the temperature unit interface.

**Step 4:** Press the PV- or LOAD-button to set the temperature units.

**Step 5:** Press the SET-button to confirm the parameters.

Setting parameters, LCD cycle time.

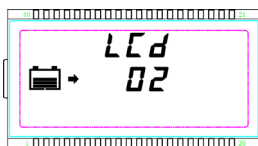

NOTE: The LCD cycle default time is 2 seconds, the setting time range is 0~20 seconds

Operation:


**Step 1:** Press the SET-button for the setting interface.

**Step 2:** Press the PV-button and hold 5s for the LCD cycle time interface.

**Step 3:** Press the PV-or LOAD-button to set the LCD cycle time.

**Step 4:** Press the SET-button to confirm the parameters.

Setting parameters, local load working mode

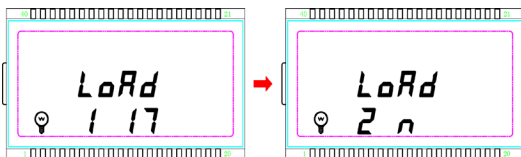

Operation:

**Step 1:** Press the SET-button for the setting interface.

**Step 2:** Press the LOAD-button and hold 5s for the load working mode interface.

**Step 3:** Press the PV- or LOAD-button to set the working mode..

**Step 4:** Press the SET-button to confirm the parameters.

NOTE: Please refer to chapter 4.2 for the load working mode.

## 4.CONTROL PARAMETERS SETTING

### 4.1 BATTERY TYPES

#### 4.1.1 Support battery types

1	Lead-acid battery	Sealed(default)
		Gel
		Flooded
		User
2	Lithium battery	LiFePO4(4S/12V;8S/24V;16S/48V)
		Li(NiCoMn)O <sub>2</sub> (3S/12V;6S/24V;12S/48V)
		User



CAUTION: When the default battery type is selected, the battery voltage control parameters will be set by default and can't be changed. To change these parameters, select "User" battery type.

#### 4.1.2 Battery Voltage Control Parameters

##### ◆ Lead-acid battery parameters

The parameters are in 12V system at 25 °C, please double the values in 24V system and quadruple the values in 48V system.

<b>Battery type</b>	Sealed	Gel	Flooded	User
<b>Voltage</b>				
Over Voltage Disconnect Voltage	16.0V	16.0V	16.0V	9~17V
Charging Limit Voltage	15.0V	15.0V	15.0V	9~17V
Over Voltage Reconnect Voltage	15.0V	15.0V	15.0V	9~17V
Equalize Charging Voltage	14.6V	—	14.8V	9~17V
Boost Charging Voltage	14.4V	14.2V	14.6V	9~17V
Float Charging Voltage	13.8V	13.8V	13.8V	9~17V
Boost Reconnect Charging Voltage	13.2V	13.2V	13.2V	9~17V
Low Voltage Reconnect Voltage	12.6V	12.6V	12.6V	9~17V
Under Voltage Warning Reconnect Voltage	12.2V	12.2V	12.2V	9~17V
Under Voltage Warning Voltage	12.0V	12.0V	12.0V	9~17V
Low Voltage Disconnect Voltage	11.1V	11.1V	11.1V	9~17V
Discharging Limit Voltage	10.6V	10.6V	10.6V	9~17V
Equalize Duration	120 min	—	120 min	0~180 min
Boost Duration	120 min	120 min	120 min	10~180 min

The following rules must be observed when modifying the parameter values in User for lead-acid battery.

-Over Voltage Disconnect Voltage > Charging Limit Voltage  $\geq$  Equalize Charging Voltage  $\geq$  Boost Charging Voltage  $\geq$  Float Charging Voltage > Boost Reconnect Charging Voltage.

-Over Voltage Disconnect Voltage > Over Voltage Reconnect Voltage

-Low Voltage Reconnect Voltage > Low Voltage Disconnect Voltage  $\geq$  Discharging Limit Voltage.

-Under Voltage Warning Reconnect Voltage > Under Voltage Warning Voltage  $\geq$  Discharging Limit Voltage.

-Boost Reconnect Charging voltage > Low Voltage Reconnect Voltage.

### ◆ Lithium battery parameters

The parameters are in 12V system at 25 °C, please double the values in 24V system and quadruple the values in 48V system.

Battery type Voltage	LiFePO4	Li(NiCoMn)O <sub>2</sub>	User
Over Voltage Disconnect Voltage	15.6V	13.5V	9~17V

Charging Limit Voltage	14.6V	12.6V	9~17V
Over Voltage Reconnect Voltage	14.7V	12.7V	9~17V
Equalize Charging Voltage	14.5V	12.5V	9~17V
Boost Charging Voltage	14.5V	12.5V	9~17V
Float Charging Voltage	13.8V	12.2V	9~17V
Boost Reconnect Charging Voltage	13.2V	12.1V	9~17V
Low Voltage Reconnect Voltage	12.8V	10.5V	9~17V
Under Voltage Warning Reconnect Voltage	12.8V	11.0V	9~17V
Under Voltage Warning Voltage	12.0V	10.5V	9~17V
Low Voltage Disconnect Voltage	11.1V	9.3V	9~17V
Discharging Limit Voltage	10.6V	9.3V	9~17V

The following rules must be observed when modifying the parameter values in User for lithium battery.

-Over Voltage Disconnect Voltage > Over charging protection voltage (Protection Circuit Modules(BMS))+0.2V<sup>\*</sup>;

-Over Voltage Disconnect Voltage > Over Voltage Reconnect Voltage = Charging Limit Voltage ≥ Equalize Charging Voltage = Boost Charging Voltage ≥ Float Charging Voltage > Boost Reconnect Charging Voltage;

-Low Voltage Reconnect Voltage > Low Voltage Disconnect Voltage ≥ Discharging Limit Voltage;

-Under Voltage Warning Reconnect Voltage > Under Voltage Warning Voltage ≥ Discharging Limit Voltage;

-Boost Reconnect Charging voltage > Low Voltage Reconnect Voltage;

-Low Voltage Disconnect Voltage ≥ Over discharging protection voltage (BMS)+0.2V<sup>\*\*</sup>.




**WARNING:** The voltage parameters of lithium battery can be set, but you must refer to the voltage parameters of lithium battery BMS.



**WARNING:** The required accuracy of BMS shall be at least 0.2V. If the deviation is higher than 0.2V, the manufacturer will assume no liability for any system malfunction caused by this.


### 4.1.3 Settings

#### 1) PC setting

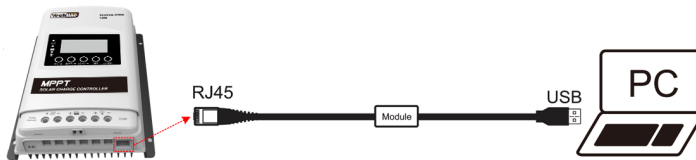

Download software for connection: Visit our website [www.ocs-recreatie.nl](http://www.ocs-recreatie.nl) and click on the item for download the QR code.

## 2) APP software setting

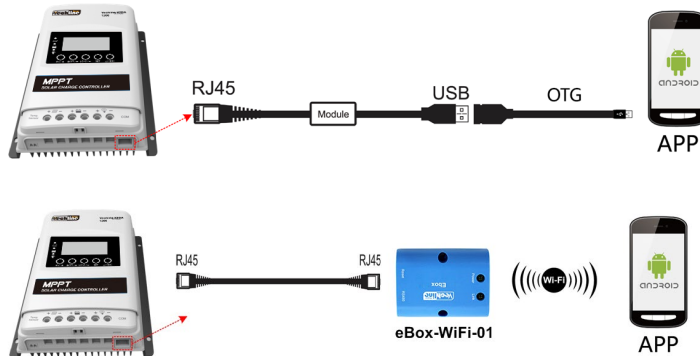


Download software(User for lead-acid battery): Visit the item on the website of [www.ocs-recreatie.nl](http://www.ocs-recreatie.nl) and download the QR code.

Download software(User for lithium battery): Visit the item on the website of [www.ocs-recreatie.nl](http://www.ocs-recreatie.nl) and download the QR code

## 4.2 LOAD WORKING MODES

### 4.2.1 LCD settings

LCD setting for XDS2 display and operation

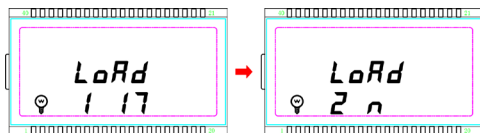

When the LCD shows above interface, operate as following:

**Step 1:** Press the SET- button for the setting interface.

**Step 2:** Press the LOAD- button and hold 5s for the load working mode interface.

**Step 3:** Press the PV- or LOAD-button to set the load working modes.

**Step 4:** Press the SET-button to confirm the parameters.

LCD setting for load working mode

1**	Timer 1	2**	Timer 2
100	Light ON/OFF	2 n	Disabled
101	Load will be on for 1 hour aftersunset	201	Load will be on for 1 hour before sunrise

<b>102</b>	Load will be on for 2 hours after sunset	<b>202</b>	Load will be on for 2 hours before sunrise
<b>103</b> ~ <b>113</b>	Load will be on for 3~13 hours after sunset	<b>203</b> ~ <b>213</b>	Load will be on for 3~13 hours before sunrise
<b>114</b>	Load will be on for 14 hours after sunset	<b>214</b>	Load will be on for 14 hours before sunrise
<b>115</b>	Load will be on for 15 hours after sunset	<b>215</b>	Load will be on for 15 hours before sunrise
<b>116</b>	Test mode	<b>2 n</b>	Disabled
<b>117</b>	Manual mode(Default load ON)	<b>2 n</b>	Disabled



**CAUTION:** Please set Light ON/OFF, Test mode and Manual mode via Timer1. Timer2 will be disabled and display "2 n".


#### 4.2.2 R485 communication setting

Load working mode:


- Manual Control (default)

Control ON/OFF of the load via the button or remote commands (e.g., APP or PC software).

- Light ON/OFF

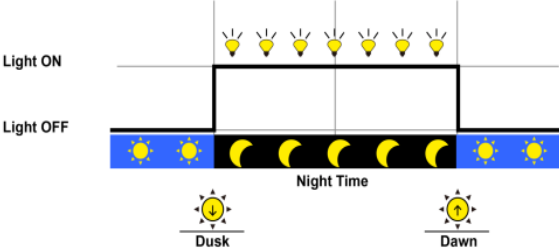

- Light ON+ Timer

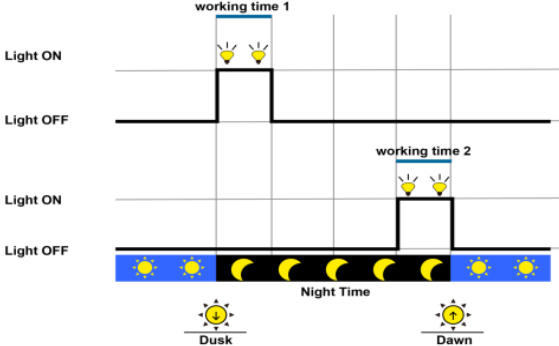


- Time Control

Control the load ON/OFF time through setting the real-time clock.


Load working mode settings:


(1)PC setting

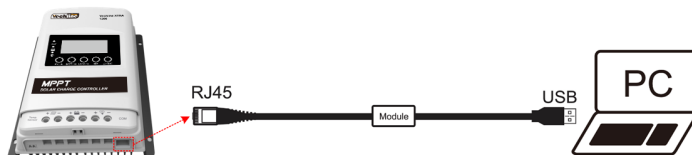

Download software for connection: : Visit the item on the website of [www.ocs-recreatie.nl](http://www.ocs-recreatie.nl) and download the QR code.

(2)APP software setting

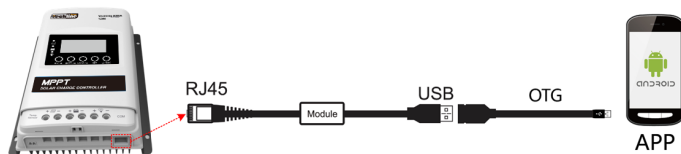

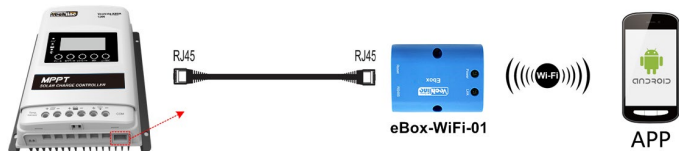
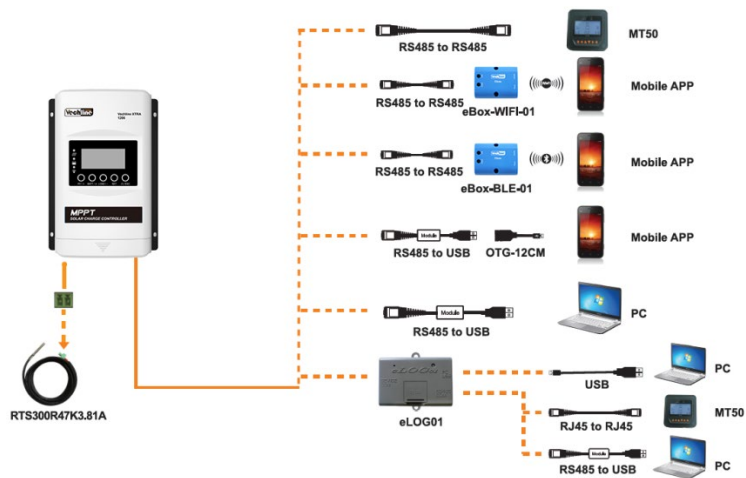


Download software(User for lead-acid battery): Visit the item on the website of [www.ocs-recreatie.nl](http://www.ocs-recreatie.nl) and download the QR code.

Download software(User for lithium battery): Visit the item on the website of [www.ocs-recreatie.nl](http://www.ocs-recreatie.nl) and download the QR code.

### 4.3 Accessories (optional)

<b>RS485 to Bluetooth Adapter</b> Ebox		After the controller is connected with the eBox through the standard Ethernet cable (parallel cable), the operating status and related parameters of the controller can be monitored by the mobile APP software through Bluetooth signals.
<b>NOTE: For setting and operation of accessory, please refer to accessory's user manual.</b>		



## 5. PROTECTIONS, TROUBLESHOOTING AND MAINTENANCE


### 5.1 PROTECTION

PV Over Current/power	When the charging current or power of the PV array exceeds the controller's rated current or power, it will be charge at the rated current or power. <b>NOTE: When the PV modules are in series, ensure that the open-circuit voltage of the PV array does not exceed the "maximum PV open-circuit voltage" rating. Otherwise the controller may be damaged.</b>
PV Short Circuit	When not in PV charging state, the controller will not be damaged in case of a short-circuiting in the PV array.
PV Reverse Polarity	When the polarity of the PV array is reversed, the controller may not be damaged and can continue to operate normally after the polarity is corrected. <b>NOTE: If the PV array is reverse connected to the controller, 1.5 times rated controller power(watts)from the PV array, will damage the controller.</b>
Night Reverse Charging	Prevents the battery from discharging to the PV module at night.
Battery Reverse Polarity	Fully protected against battery reverse polarity; no damage will occur to the battery. Correct the miswire to resume normal operation. <b>NOTE: Limited to the characteristic of lithium battery, when the PV connection is correct and battery connection reversed, the controller will be damaged.</b>
Battery Over Voltage	When the battery voltage reaches the over voltage disconnect voltage, it will automatically stop battery charging to prevent battery damage caused by over-charging.
Battery Over Discharge	When the battery voltage reaches the low voltage disconnect voltage, it will automatically stop battery discharging to prevent battery damage caused by over-discharging. (Any controller connected loads will be disconnected. Loads directly connected to the battery will not be affected and may continue to discharge the battery.)

Battery Overheating	The controller can detect the battery temperature through an external temperature sensor. The controller stops working when its temperature exceeds 65 °C and restart to work when its temperature is below 55 °C.
Lithium Battery Low Temperature	When the temperature detected by the optional temperature sensor is lower than the Low Temperature Protection Threshold(LTPT), the controller will stop charging and discharging automatically. When the detected temperature is higher than the LTPT, the controller will be working automatically (The LTPT is 0 °C by default and can be set within the range of 10 ~ -40 °C).
Load Short Circuit	When the load is short circuited (The short circuit current is $\geq 4$ times the rated controller load current), the controller will automatically cut off the output. If the load reconnects the output automatically five times (delay of 5s, 10s, 15s, 20s, 25s), it needs to be cleared by pressing the Load button, restarting the controller or switching from Night to the Day (nighttime > 3 hours).
Load Overload	When the load is overloading (The overload current is $\geq 1.05$ times the rated load current), the controller will automatically cut off the output. If the load reconnects automatically five times (delay of 5s, 10s, 15s, 20s, 25s), it needs to be cleared by pressing the Load button restarting the controller, switching from Night to Day (nighttime > 3 hours).
Controller Overheating*	The controller is able to detect the temperature inside the battery. The controller stops working when its temperature exceeds 85 °C and restart to work when its temperature is below 75 °C.
TVS High Voltage Transients	The internal circuitry of the controller is designed with Transient Voltage Suppressors (TVS) which can only protect against high-voltage surge pulses with less energy. If the controller is to be used in an area with frequent lightning strikes, it is recommended to install an external surge arrester.



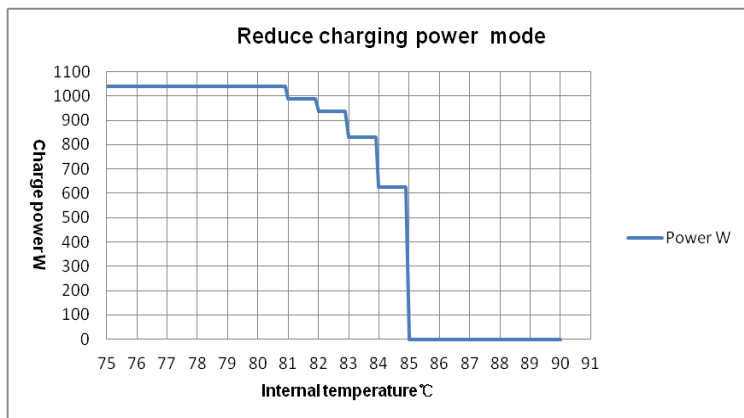

When the internal temperature is 81°C, the reduce charging power mode which reduce the charging power of 5%,10%,20%,40% every increase 1 °C is turned on. If the internal temperature is greater than 85°C, the controller will stop charging. When the temperature declines to be below 75 °C, the controller will resume.

For example:



## 5.2 TROUBLESHOOTING

Possible reasons	Faults	Troubleshooting
PV array disconnection	Charging LED indicator off during daytime when sunshine falls on PV modules properly	Confirm that PV wire connections are correct and tight
Battery voltage is lower than 8V	Wire connection is correct ,the controller is not working.	Please check the voltage of battery. At least 8V voltage to activate the controller.

Battery over voltage	Charging indicator Green fast flashing Battery level shows full, battery frame blink, fault icon blink 	Check if battery voltage is higher than OVD(over voltage disconnect voltage), and disconnect the PV.
Battery over discharged	Charging indicator Red on Solid Battery level shows empty, battery frame blink, fault icon blink 	Check if battery voltage is higher than OVD (over voltage disconnect voltage), and disconnect the PV
Battery Overheating	Battery indicator Red slow flashing Battery frame blink, fault icon blink 	The controller will automatically turn the system off. When the temperature declines to be below 55 °C, the controller will resume.
Controller Overheating	PV/BATT indicator fast flashing	When heat sink of controller exceeds 85 °C, the controller will automatically cut off input and output circuit. When the temperature below 75 °C, the controller will resume to work.
System voltage error		①Check whether the battery voltage match with the controller working voltage. ②Please change to a suitable battery or reset the working voltage.
Load Overload	1. The load is no output 	①Please reduce the number of electric equipment. ②Restart the controller. ③Wait for one night-day cycle (night time>3 hours).
Load Short Circuit	Load and fault icon blink	①Check carefully loads connection, clear the fault. ②Restart the controller. ③Wait for one night-day cycle (night time>3 hours).

### 5.3 MAINTENANCE

The following inspections and maintenance tasks are recommended at least two times per year for best performance.

- Make sure controller firmly installed in a clean and dry ambient.
- Make sure no block on air-flow around the controller. Clear up any dirt and fragments on heat sink.
- Check all the naked wires to make sure insulation is not damaged for sun exposure, frictional wear, dryness, insects or rats etc. Repair or replace some wires if necessary.
- Tighten all the terminals. Inspect for loose, broken, or burnt wire connections.
- Check and confirm that LED is consistent with required. Pay attention to troubleshooting or error indication. Take corrective action if necessary.
- Confirm that all the system components are ground connected tightly and correctly.
- Confirm that all the terminals have no corrosion, insulation damaged, high temperature or burnt/discolored sign, tighten terminal screws to the suggested torque.
- Clear up dirt, nesting insects and corrosion in time.
- Check and confirm that lightning arrester is in good condition. Replace a new one in time to avoid damaging of the controller and even other equipment.



**WARNING: Risk of electric shock!**

**Make sure that all the power is turned off before above operations, and then follow the corresponding inspections and operations.**

## 6. TECHNICAL SPECIFICATION

### Electrical Parameters

Item	XTRA 1206	XTRA 2206
System nominal voltage	12/24VDC <sup>①</sup> Auto	
Rated charge current	10A	20A
Rated discharge current	10A	20A
Battery voltage range	8~32V	
Max. PV open circuit voltage	60V <sup>②</sup> 46V <sup>③</sup>	
MPP voltage range	(Battery voltage +2V)~36V	
Rated charge power	130W/12V 260W/24V	260W/12V 520W/24V
Max. conversion efficiency	97.9%	98.3%

Full load efficiency	97%	96.7%
Self-consumption	$\leq 14\text{mA}(12\text{V})$ $\leq 15\text{mA}(24\text{V})$	
Discharge circuit voltage drop	$\leq 0.23\text{V}$	
Temperature compensate coefficient <sup>④</sup>	-3mV/°C/2V (Default)	
Grounding	Common negative	
RS485 interface	5VDC/200mA(RJ45)	
LCD backlight time	Default:60S,Range:0~999S(0S:the backlight is ON all the time)	

- ①When lithium battery is used, the system voltage can't be identified automatically.
- ②At minimum operating environment temperature
- ③At 25°C environment temperature
- ④When lithium battery is used, the temperature compensate coefficient must be 0,and can't be changed.

## Environmental Parameters

Item	XTRA 1206	XTRA 2206
Working environment temperature♦(100% input and output)	-25°C~+50°C(LCD) -30°C~+50°C(No LCD)	
Storage temperature range	-20°C~+70°C	
Relative humidity	≤95%, N.C.	
Enclosure	IP33*	
Pollution degree	PD2	

◆The controller can full load working in the working environment temperature, When the internal temperature reach to 81°C, the reducing charging power mode is turned on. Refer to P34.

★3-protection against solid objects: protected against solids objects over 2.5mm.  
3-protected against sprays to 60° from the vertical.

## Mechanical Parameters

Item	XTRA1206	XTRA2206
Dimension	175×143×48mm	217×158×56.5mm
Mounting dimension	120×134mm	160×149mm
Mounting hole size	Φ5mm	
Terminal	12AWG(4mm <sup>2</sup> )	6AWG(16mm <sup>2</sup> )
Recommended cable	12AWG(4mm <sup>2</sup> )	10AWG(6mm <sup>2</sup> )
Weight	0.57kg	0.96kg

## Certification


Safety	EN/IEC62109-1
EMC(Emission immunity)	EN61000-6-3/EN61000-6-1
FCC	47 CFR Part 15, Subpart B
Performance &function	IEC62509
ROHS	IEC62321-3-1

# Annex I Conversion Efficiency Curves


Illumination Intensity: 1000W/m<sup>2</sup> Temp: 25°C

Model: XTRA1206

1. Solar Module MPP Voltage(17V, 34V) / Nominal System Voltage(12V)

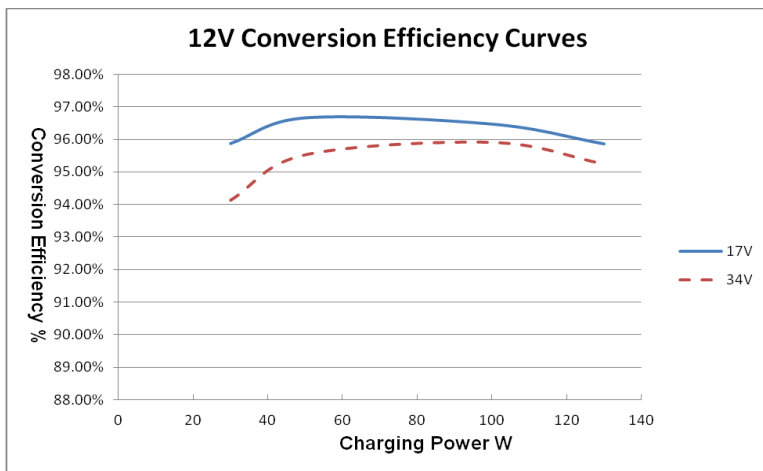


2. Solar Module MPP Voltage(34V,45V) / Nominal System Voltage(24V)

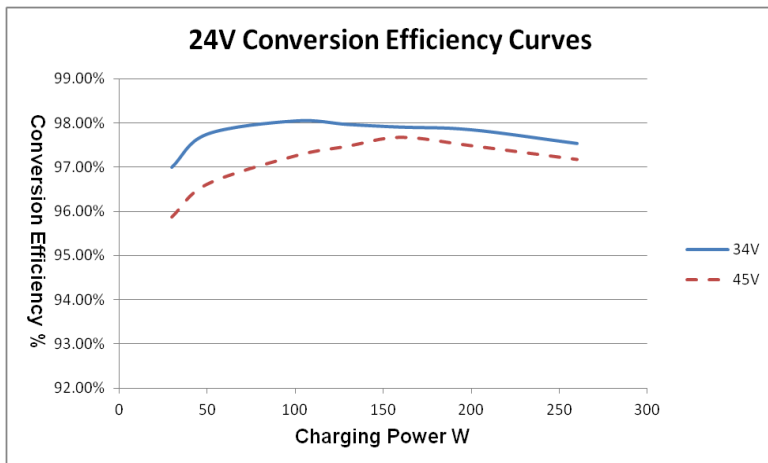


## Model: XTRA2206

1. Solar Module MPP Voltage(17V, 34V) / Nominal System Voltage(12V)

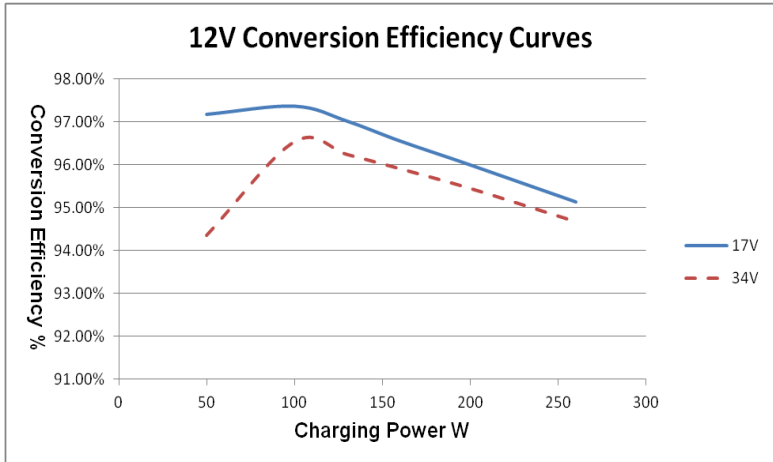


2. Solar Module MPP Voltage(34V,45V) / Nominal System Voltage(24V)

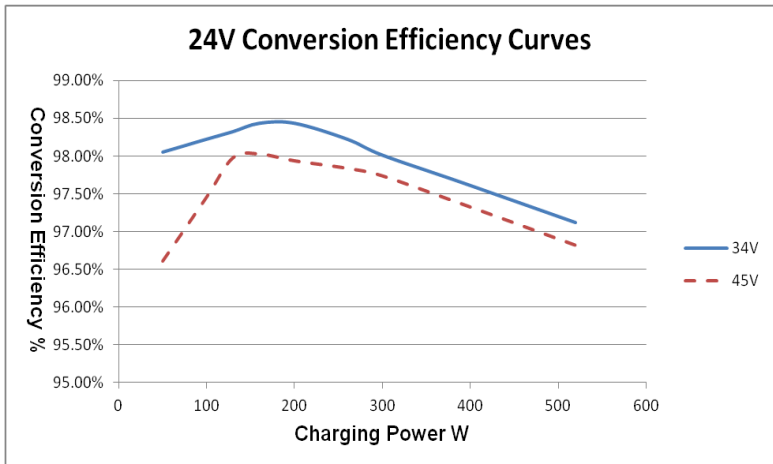


## Annex II Mechanical Dimension Diagram

XTRA1206 (Unit: mm)

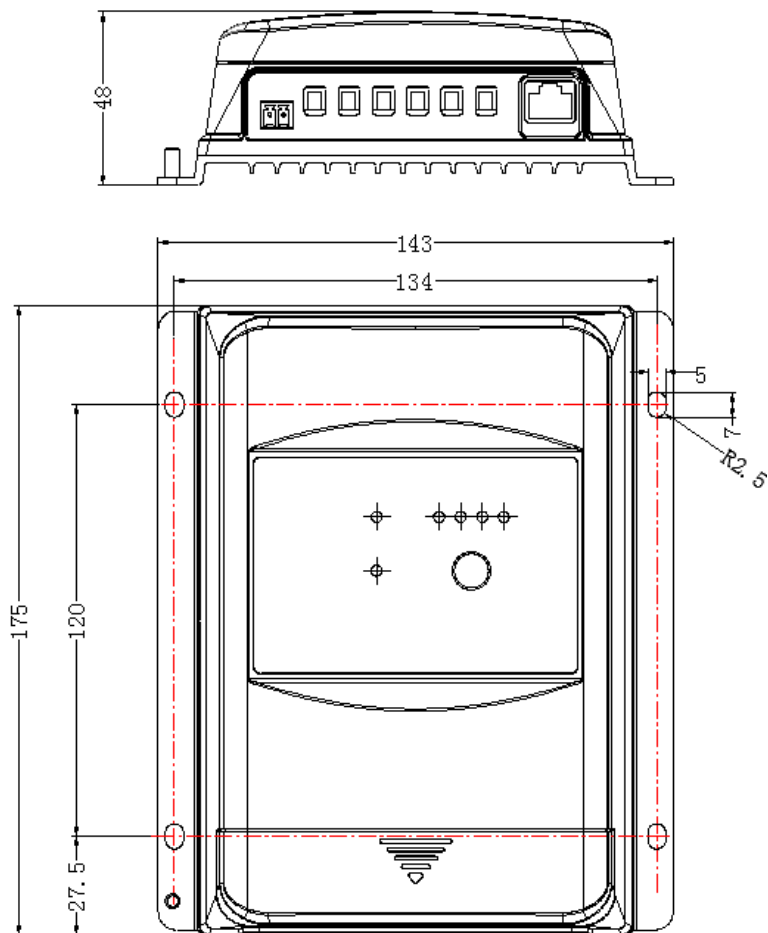

**XTRA2206 (Unit: mm)**

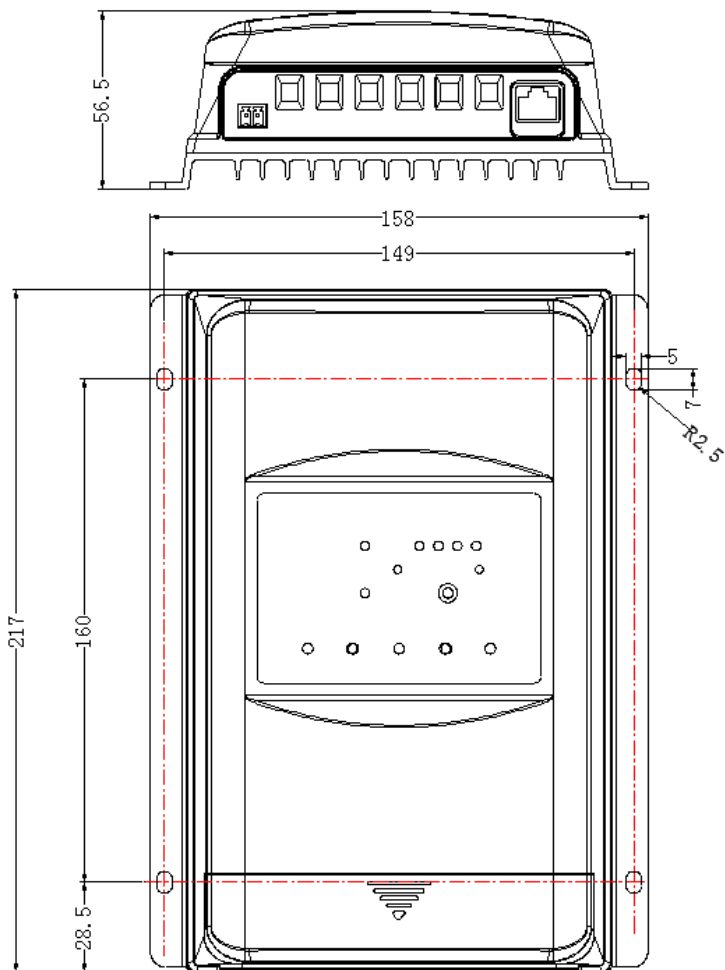





**Vechline is powered by**

**OCS-RECREATIE GROOTHANDEL BV**

**Tel: +31-(0)742455680**

**E-mail: [info@ocs-recreatie.nl](mailto:info@ocs-recreatie.nl)**

**Website: [www.ocs-recreatie.nl](http://www.ocs-recreatie.nl)**